
 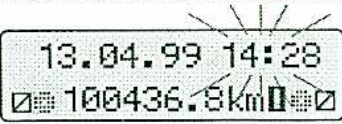

 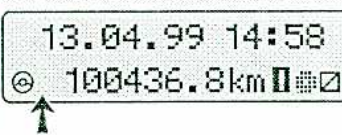


 
 


Error code - Overview

Displayed message	Code	Meaning / measure
 <p>(Time is flashing)</p>	9053 = or 9064 =	<ul style="list-style-type: none"> The MTCO 1324 has automatically changed over to the beginning or the end of the daylight saving time, or the time has been adjusted with the chart inserted. <p>Note: update the chart carrier settings, ➔ see page 34.</p>
 <p>(Colon is not flashing)</p>	9064 =	Error during chart carrier settings update Update the chart carrier settings once again, ➔ see page 34.
	A050 =	Trip without driver 1 chart (Error code cannot be found in the error memory.) Insert driver 1 chart.
	9051 = 9052 =	Driver 1 chart is missing Driver 2 chart is missing (This message will appear when switching from  to  , for example, while the chart is missing.) Insert chart(s).
	900A = 900B = A00C = 900F = 9010 = 9060 =	Error during CAN transmission Internal error Keypad error, key pressed too long or blocked LCD error (display) Error at the drawer Start the ejection procedure and close the drawer again afterwards.

➔ To be continued on the next page

<i>Displayed messages</i>	<i>Code</i>	<i>Meaning / measure</i>
	9061	= Error in recording system (The MTCO will record these errors on the chart, ➔ see page 39.)
	9062	
	9063	
	9430	= Error at "B7" v-pulse output
	A411	= Disconnection towards indicating instrument
	A423	= Error during pulse generator communication
	A822	= Error in pulse generator key / serial number / signal (The MTCO will record these errors on the chart, ➔ see page 39.)
	A400	= Power loss (Error code cannot be found in the error memory. The MTCO will record a power loss on the chart, ➔ see page 39.)

Trouble shooting

Only after having remedied the error cause, e.g. in case of an operating error, will the message automatically be deleted.



In case one of the messages is shown repeatedly, immediately consult a Siemens VDO service partner!

Updating the chart carrier

1. Open the drawer and remove both charts.
2. Close the drawer again.
 - The MTCO will automatically update the time of the chart carrier, and the error symbol and the time will then stop to flash.
3. Open the drawer and insert new charts if necessary. The MTCO 1324 will be ready for use again.